

WET TYPE Diamond drill for tile

AQUASHOT




*Smoothly drills into porcelain tile,
ceramic tile, marble, and granite*
Good durability! Automatic water feeds!

Operating

- Required rotation : 1000~3000/min(rpm)
- *Water feeds only between 1000 and 3000/min(rpm) otherwise water is not supplied.

**Efficient drilling with using
cordless impact drivers!**

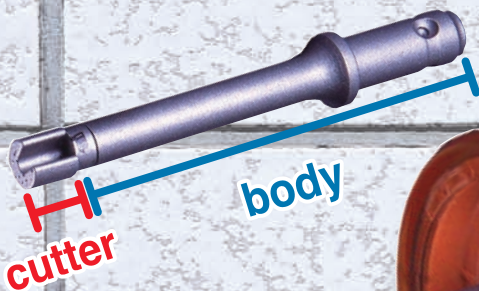

Replaceable cutter!

Quick change!

Built-in water supply tank!

Simple workability without water tank, hose and stopper.




- Best for : porcelain tile, ceramic tile, marble, and granite
- NOTE : AQUASHOT is available for tile and stone. For drilling in concrete or mortar of base materials of tile, please use the percussion drill bit or SDS-plus bit.
- Specification : shank : 1/4" hexagonal shank(6.35mm) (DIN3126,ISO1173 style E6.3)
cutter diameter : 4.0~10.5mm
max. drilling depth : 35mm



cutter dia. (mm)	AQUASHOT AS set	AQUASHOT AS cutter	AQUASHOT AS body	AQUASHOT AS shank impact
	Part No.	Part No.	Part No.	Part No.
4.0	AS040STE	AS040C	AS040B	ASSKJDE
5.0	AS050STE	AS050C	AS050B	
6.0	AS060STE	AS060C	AS060B	
6.5	AS065STE	AS065C		
7.0	AS070STE	AS070C	AS080B	
8.0	AS080STE	AS080C		
8.5	AS085STE	AS085C	AS085B	
9.0	AS090STE	AS090C	AS100B	
10.0	AS100STE	AS100C	AS105B	
10.5	AS105STE	AS105C	AS105B	

Option

Item	Part No.
Positioning Guide	PG
Positioning Plate	PP
Water Bottle	ASWB
Dust Collecting Pad	SJP038
Dressing Plate	DDP
Plug Ejector	DMPE1

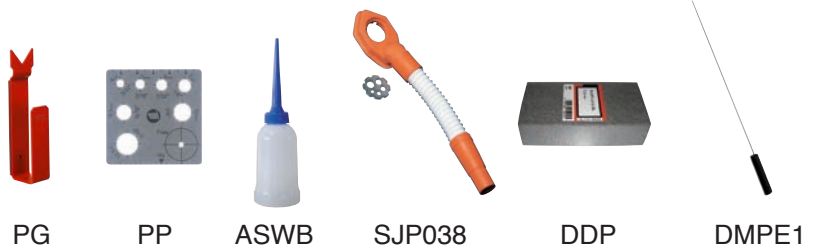

How to use

- Expand water tank by pulling the handle portion towards drill.
- Fill with clean water. **NOTE** Use only our standard bottle.(ASWB)
- Flip the release lever switch towards the arrow to activate the water tank.
- Start drilling. **NOTE** Maintain between 1000-3000/min(rpm) while drilling to ensure water is released.

※Check out the video instruction on line. → → → https://youtu.be/84gw_RMy2GI



ISO 9001/14001 Certified <http://www.miyanaga.co.jp>

Registered Office and Factory
2393 Fukui, Miki, Hyogo 673-0433, Japan Tel: +81-794-82-3648, Fax: +81-794-82-8462

Representative Office - Europe
Zettaching 12, 70567 Stuttgart, Germany Tel: +49-711-7280661, Fax: +49-711-7157077

MIYANAGA America Corp.
1010 W. Republic Dr. Unit 1, Addison, Illinois 60101, USA Tel:+1-630-359-5795, Fax:+1-630-359-5806